




Samsung Galaxy Mega Speaker Assmebly Replacement

Remove or replace the speakers of your Samsung Galaxy Mega. The speakers allow you to play out music and other media.

Written By: nithin

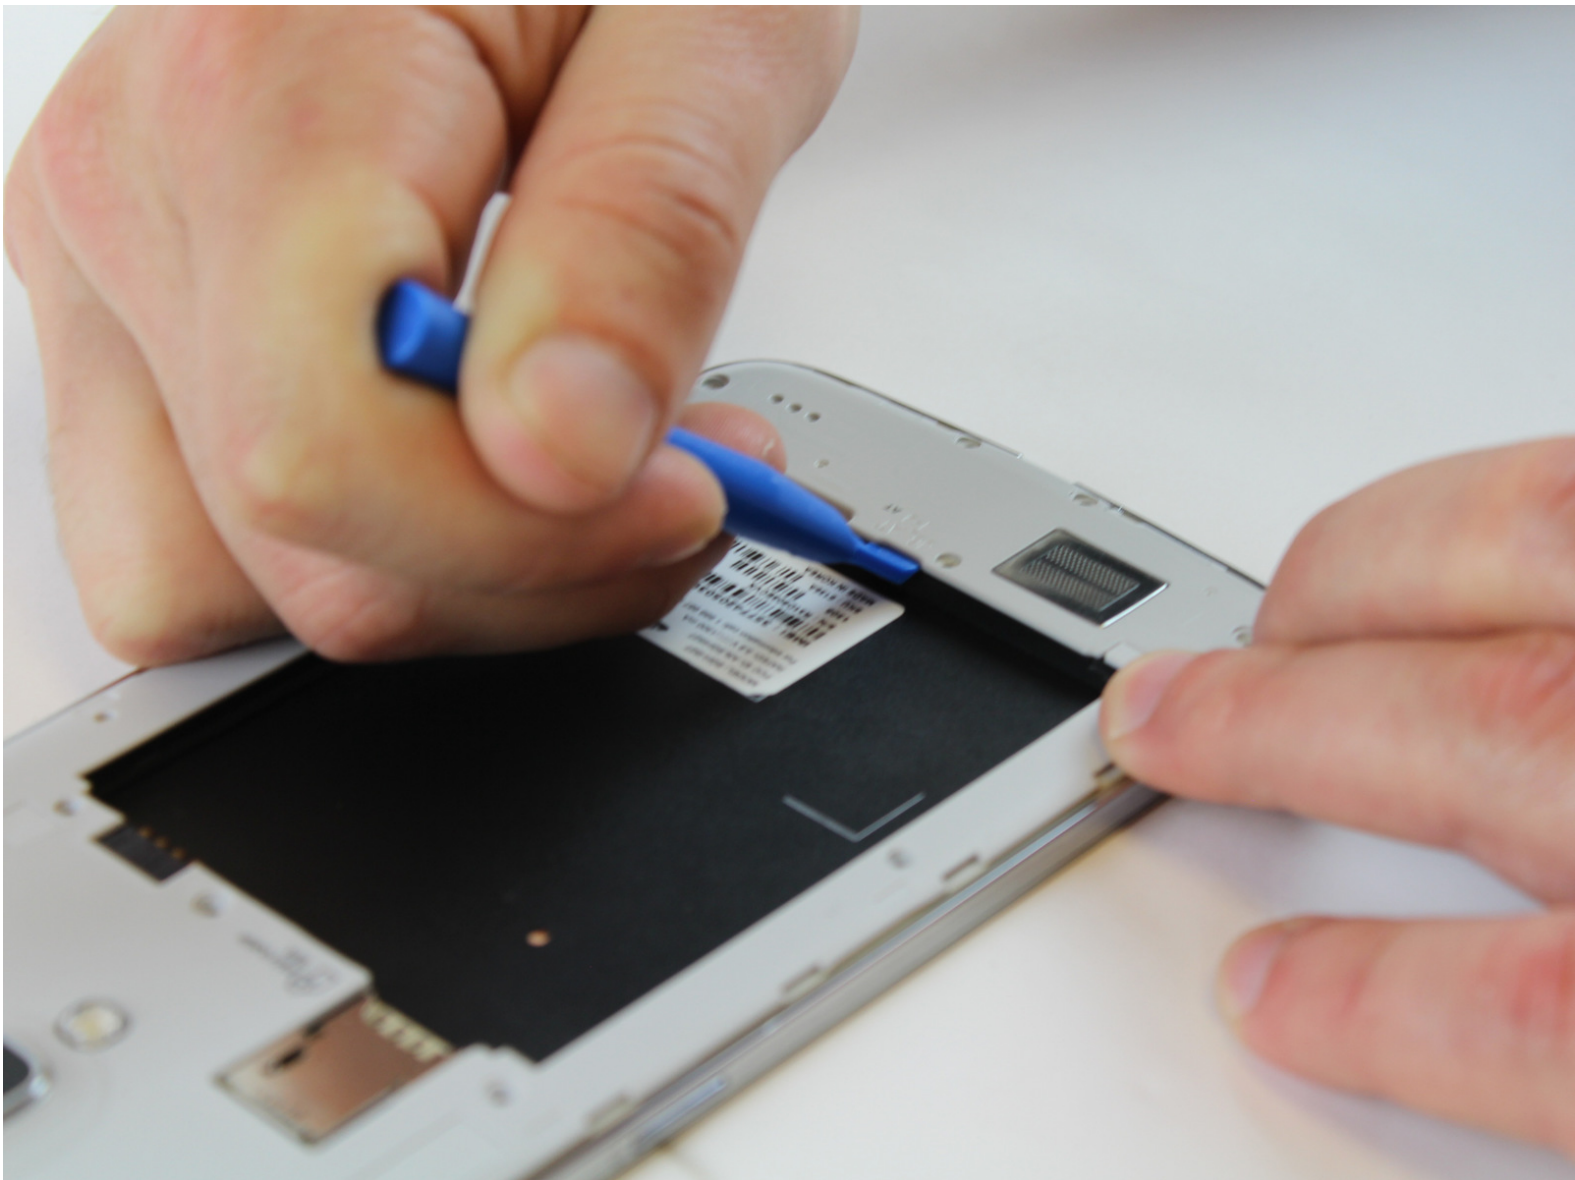


INTRODUCTION

This guide instructs on how to replace the back panel audio speaker.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

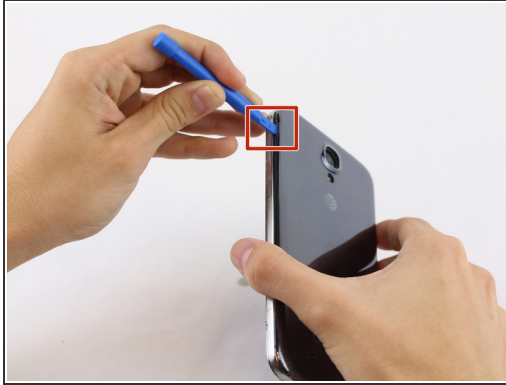


- Before starting, ensure device is completely turned off.
- On the back of phone, locate the slot on the top left corner.
- Insert plastic opening tool or fingernail and pull up on the back plate.
- With the corner released, slide your finger around the device between the back plate and the phone to release connectors.

Step 2

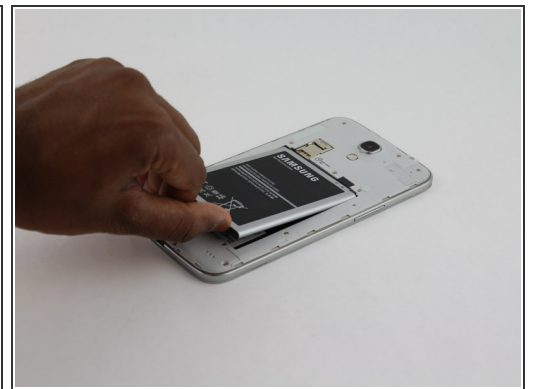

- Insert fingernail into the slot on bottom of battery and gently pull up.
- Remove the battery.

Step 3 — Speaker Assembly

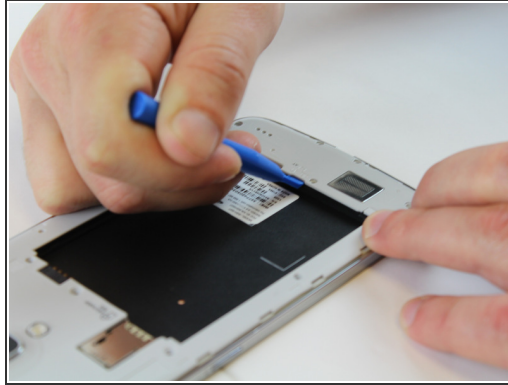

- Remove the 6 3.45 mm Phillips #000 screws from the bottom of the assembly surrounding the speaker.
- Gently insert plastic opening tool through the inside groove of the speaker assembly.
- Once the top part of the speaker assembly pops free. Gently lift up with your fingers to remove speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 11:45:54 AM.